

BallastWise®



FLUORESCENT BALLAST SPECIFICATIONS

DESCRIPTION

CATALOG NO.	TYPE	STARTING METHOD	NUMBER OF LAMPS	LAMP TYPE
DXE496HO121	Electronic	Instant Start	4	F96T12HO,F84T12HO, F72T12HO,F64T12HO, F60T12HO,F48T12HO


ELECTRICAL CHARACTERISTICS

INPUT VOLTAGE	REQUENCY	LAMP WATTS	INPUT WATTS	INPUT CURRENT	THD	PF	
120V	60Hz	110W(95W),100W, 85W,80W,75W, 63W	458W	4.02A	30%	0.95	SOUND RATED A
MIN START TEMP		BALLAST FACTOR	BEF	O.C.V.	BALLAST FREQUENCY	NO PCB'S	
0°F/-18°C	Class P TYPE 1 Outdoor	1.0	0.218	600VRMS	25kHz		

PHYSICAL CHARACTERISTICS

	CASE DIMENSIONS				
	UNITS	M	L	W	H
	INCHES	18.74	19.24	3.45	1.00
TOL(+/-)	0.05	0.05	0.05	0.05	
LEAD LENGTH					
UNITS	BLACK	WHITE	RED	BLUE	
INCHES	CONNECTOR	CONNECTOR	2x68	4x44	
TOL(+/-)	+3/8,-0	+3/8,-0	+3/8,-0	+3/8,-0	

PRODUCT PHOTO

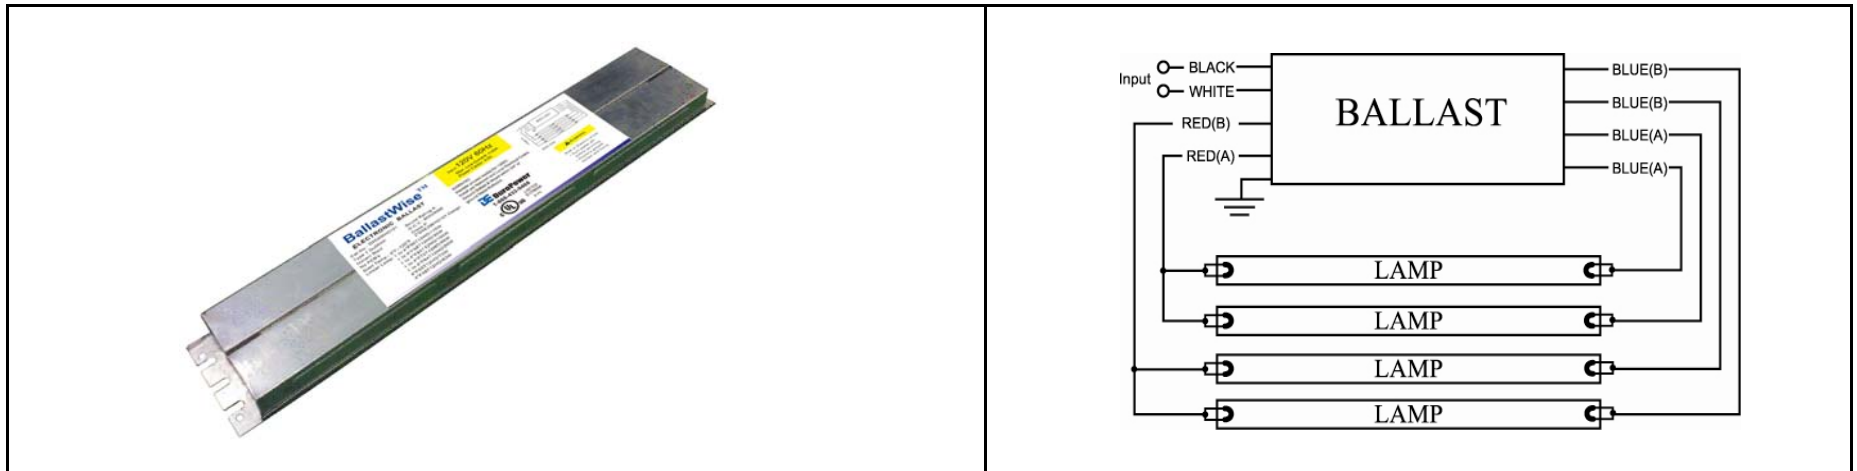

PRODUCT LABEL

<p>BallastWise™ ELECTRONIC BALLAST</p> <p>Cat.No.: DXE496HO121 Type 1 Outdoor Instant Start No PCB's Start Temp.: 0°F~120°F Linear Lamp: 1 to 4*F96T12HO/110W 1 to 4*F96T12HO/95W 1 to 4*F84T12HO/100W 1 to 4*F72T12HO/85W 1 to 4*F64T12HO/80W 4*F60T12HO/75W 4*F48T12HO/63W</p> <p>Sound Rating A O.C.V.: 600VRMS Class P 2*DXE296HO121 Design</p>	<p>Input: 120V 60Hz Max. Line Current: 4.02A Power Factor: 0.95</p>	<p>WARNING: Insulate unused lead(s) for 1000V. Install per National and Local Electrical Codes. Ground Ballast & Mount within 3/4" of ground Metal Reflector.</p> <p>DuroPower 1-866-433-9468</p> <p>UL US LISTED E178684 61FK</p>	<p>WARNING</p> <p>Risk of Electric shock</p> <ul style="list-style-type: none"> • Turn power off before servicing • Properly ground ballast and fixing
--	---	---	---